


## 8 Day Autopetfeeder

**MODEL NO.**  
20008D

Model and serial number may be found at the rear of the 8 Day Feeder base.

Please record both model and serial number in a safe place for future use.

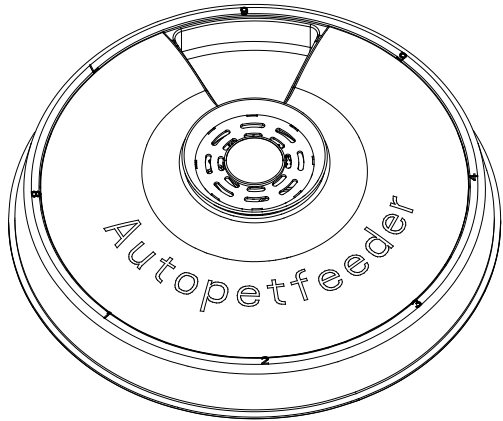

Where Purchased : \_\_\_\_\_

Date Purchased : Month \_\_\_\_\_

: Day \_\_\_\_\_

: Year \_\_\_\_\_

Model No. : \_\_\_\_\_

Serial # : \_\_\_\_\_

The Owner's Manual contains information for all models.

Read and keep this manual for future reference.

This manual contains important information on Safety, Assembly, Operation and Maintenance.

## Important : This is an Owner's Manual for 8 Day Autopetfeeder. Please do not discard this.

Congratulations on purchasing the "8 DAY AUTOPETFEEDER". You will now have more time on your hands and your pet can be fed on time. Before you can use this appliance you need to follow same simple steps to assemble the 8 Day Autopetfeeder.



### DO NOT RETURN THE PRODUCT TO THE STORE

Call 1-888 ERGOSYS (1-888-374-6797)

If there are missing parts. Check all packing for missing parts prior to discarding the package.

### Before you call us, please have the following Information ready.

1. Details of purchase like Invoice number (found on the bill or invoice)
2. Name and model number of the product (found on the manual and on the carton.)
3. Actual problem after following the instructions.
4. List of missing parts.

### LIMITED WARRANTY

Please read this warranty carefully. Ergo Systems Inc. will warranty this product to be free from manufacturing defects, including workmanship, when assembled and operated according to operating instructions enclosed with this product, for a period of ninety (90) days from the date of original purchase. This warranty is non-transferable and applies solely to the original purchaser and does not extend to subsequent owners of this product. Please register your product at <http://www.autopetfeeder.com>.

1. Repair service for a period of ninety (90) days from the date of original purchase at no charge for parts and labor with proof of purchase.
2. Replacement of defective parts for a period of 12 months from the date of original purchase with proof of purchase. (Labor not included after Initial ninety (90) days).
3. This warranty does not cover cost incurred in the shipping of the product to and from Ergo Systems Inc. for service. Shipping to Ergo Systems Inc. must be prepaid and insured by UPS or other parcel delivery services.

### THIS WARRANTY IS VOID IF THE PRODUCT IS:

1. Damaged due to negligence, abuse, misuse, accident, modification, tampering, alteration, faulty installation and/or acts of God.
2. Used for commercial applications or rentals.
3. Modified or repaired by anyone other than Ergo Systems Inc.


The extent of Ergo Systems Inc. under this limited warranty is the repair or replacement of the product at the sole discretion of Ergo Systems Inc. In no event shall Ergo Systems Inc.'s liability exceed the purchase price paid by the purchaser. Under no circumstances shall Ergo Systems Inc. be liable for any loss, direct, indirect, incidental, foreseen, unforeseen, special or consequential damage arising out of or in connection with the use of this product. This warranty is valid only in the United States of America and Canada.

### Reviewing these important safety alert symbols


When you see this Safety Symbol on the following pages, It will alert you to the possibility of damage to your 8 Day Pet Feeder. If you do not comply with the corresponding instructions. The hazard may come from something mechanical or electrical. Read the instructions carefully.




## List of parts in the 8 day Autopetfeeder Box

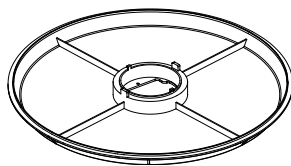


① 8 Day Feeder Base

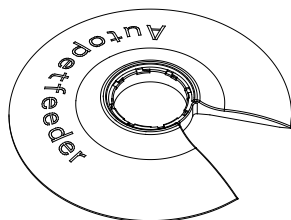

② Bowl Cover

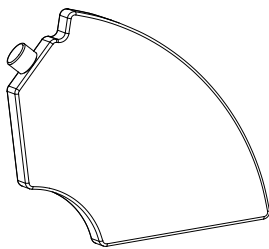


④ Ice Packs (Quantity 4)

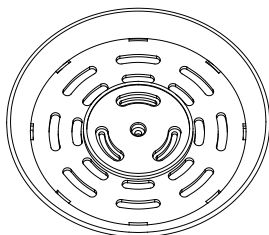


⑥ Bowl Cover Handle

### Components


1. Base
2. Bowl Cover
3. Bowl
4. Ice Pack
5. Digital Timer
6. Bowl Cover Handle
7. Cover Lock Screw

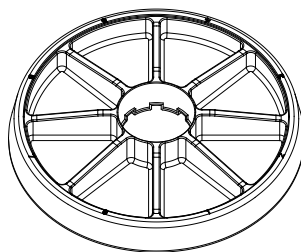

③ Bowl

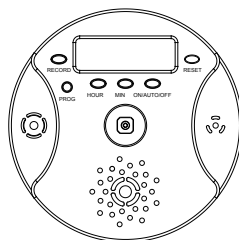

⑤ Digital Timer

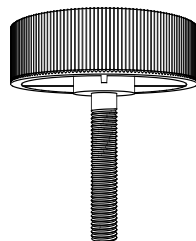

⑦ Cover Lock Screw

# Assembly

---

The 8-Day Autopetfeeder comes as a pre-assembled unit.

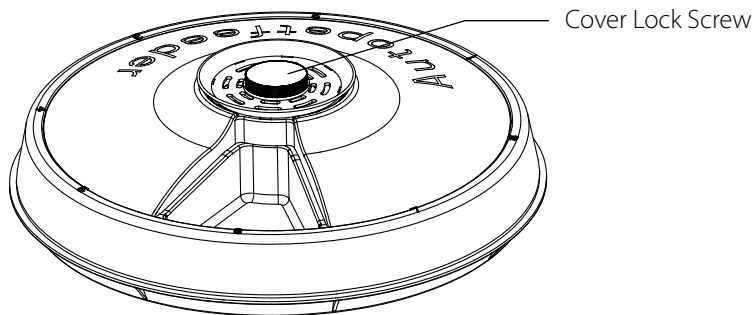


Fig-1

## Bowl Cover Alignment

### Step 1

- ❑ Remove the cover lock screw from the Bowl cover handle.

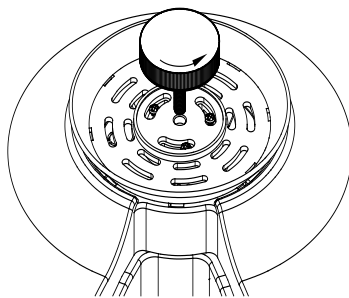


Fig-2

### Step 2

- ❑ Remove the three screws to remove the Bowl Cover Handle. Align the bowl to the cover and tighten the screws.

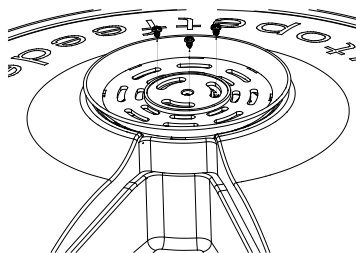


Fig-3

# Installing batteries in the Timer Module.

## Step 1

- ❑ Place the feeder bottom side up. You will find the battery compartment at the back of the Timer Module.

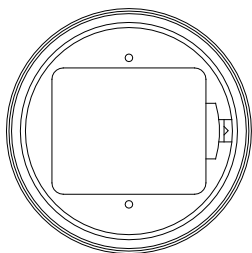


Fig-4

## Step 2

- ❑ Open the battery compartment by pushing the plastic tab to the left and lift up.

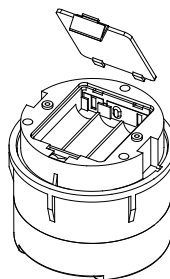


Fig-5

## Step 3

- ❑ Install 3 new AA batteries in the battery compartment.

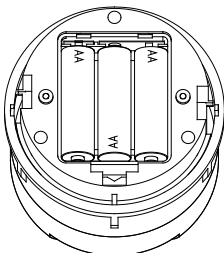


Fig-6

## Step 4

- ❑ Close and latch the cover.

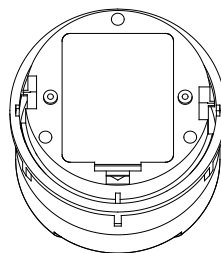


Fig-7


## NOTE:

**Always install new batteries. When you replace the old battery you must do it within 1 minute or you will lose the programs.**

**THE TIMER WILL MAKE A BEEPING SOUND WHEN THE BATTERY IS LOW**


## Replacing Timer Module

- ❑ In the event that the timer module has to be replaced, place the feeder bottom side up. Then remove the two screws that attach the timer to the feeder base.
- ❑ Then turn the feeder rightside up and lift the timer out of the base.
- ❑ To install timer follow the above steps in reverse.

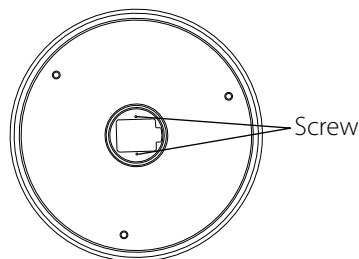

The bottom view of the 8 day feeder

# TIMER PROGRAMMING

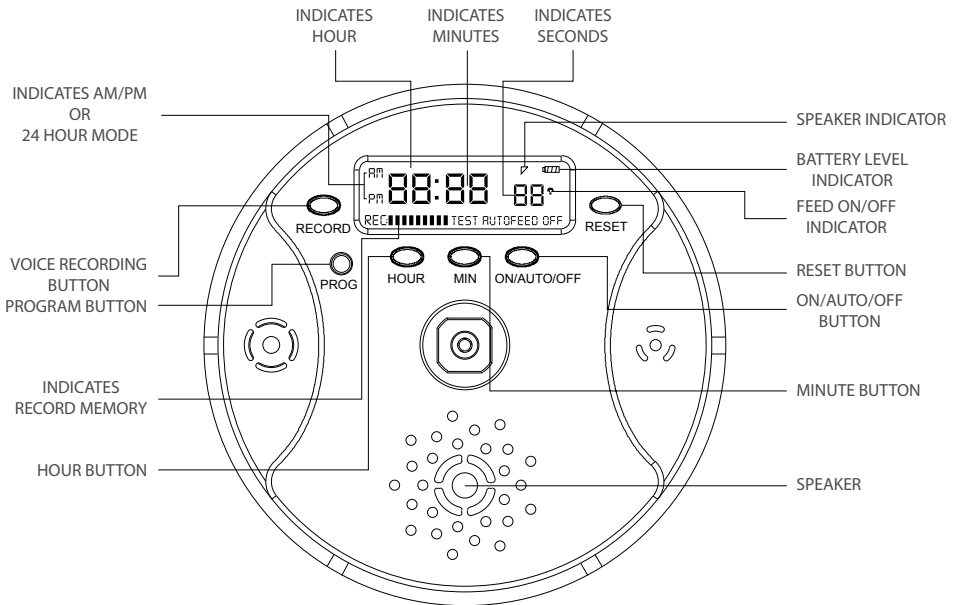

This is the Digital Timer unit for 8 Day Autopet Feeder. The timer works on 3 AA batteries. With this Digital Controller Module you can record your voice which will be played back every meal time. Records your voice up to 7 seconds.

## NOTE:

- ❑ Remove bowl cover to program the timer.
- ❑ Press RESET button prior to programming the timer. Use 3 AA Batteries. Do not mix old and new batteries.

## 1.0 Setting the time mode: 24 hour (military time) or 12 hour AM/PM MODE

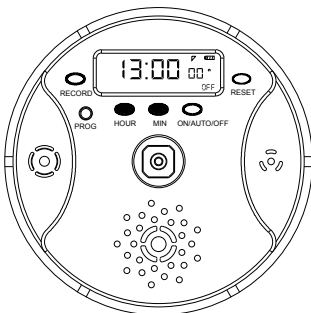


Fig-1

- ❑ Press the **HOUR** and **MINUTE** button simultaneously to activate 12 hour or 24 hour program mode. The display will begin to flash.

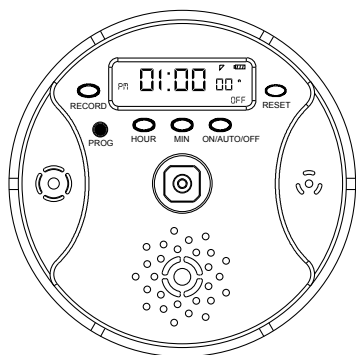


Fig-2

- Press the **PROGRAM** button to switch from the present mode to the next mode i.e. from 24 hour to AM/PM or AM/PM to 24 hour mode.

## 1.1 Setting the Current Time

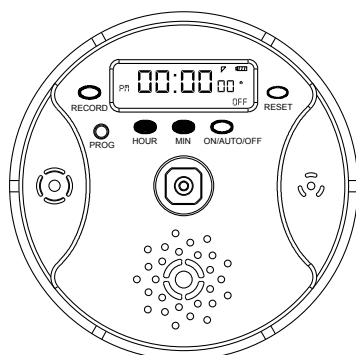


Fig-3

- Press the **HOUR** and **MINUTE** button simultaneously to activate the setting mode.

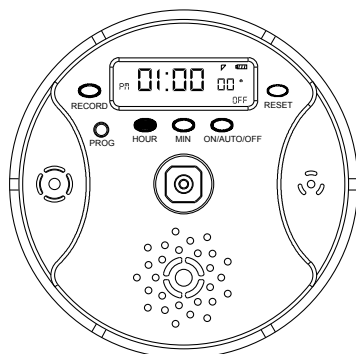


Fig-4

- Press the **HOUR** button to set the **HOUR**.

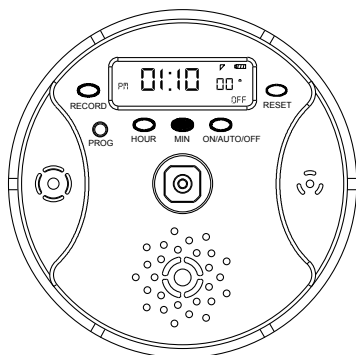


Fig-5

- ❑ Press the **MINUTE** button to set the **MINUTE**.

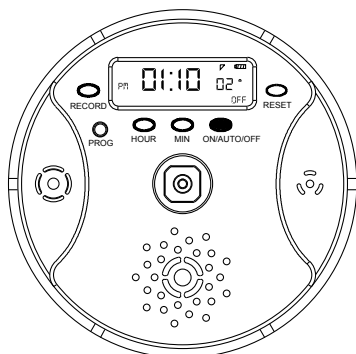


Fig-6

- ❑ Press **ON/AUTO/OFF** button to go back to clock mode.

**NOTE:** The seconds setting cannot be altered.

## 1.2 Understanding the Timer

- ❑ The autopetfeeder is capable of feeding your pet up to 8 times per day. You can set the time for the feeder up to 8 times per day. This will give you control over the amount of food you feed your pet and also the time your pet is fed. By pressing the **PROGRAM** button you will enter the programming mode. The display will now show 1, At this time the feeder will turn **ON** and after the cover rotates 45 degrees, the feeder will turn **OFF**.
- ❑ The pet feeder is capable of feeding both dry and canned food and pet meds.



## 1.3 ON/AUTO/OFF

Now let us understand the different modes of operation in the timer.

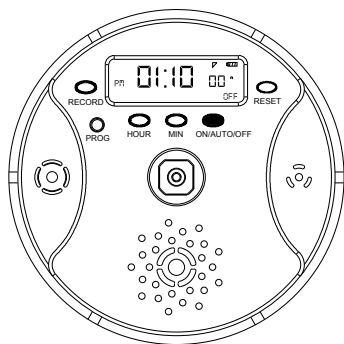


Fig-7

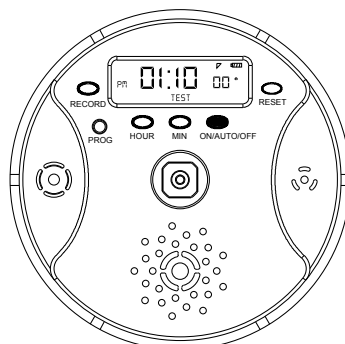


Fig-8

- Press **ON/AUTO/OFF** button to toggle between **TEST**, **AUTO** and **OFF** mode. The display will show the mode in which the timer is set.

- In **TEST** mode the bowl cover rotates 45 degree and enters the next feed compartment.

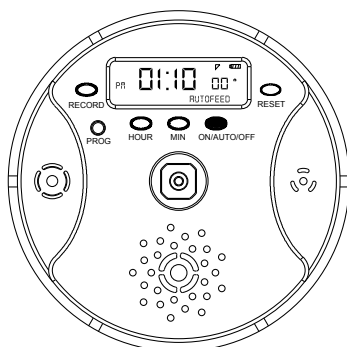


Fig-9

- In **AUTO** mode the feeder works as per the programmed schedule.

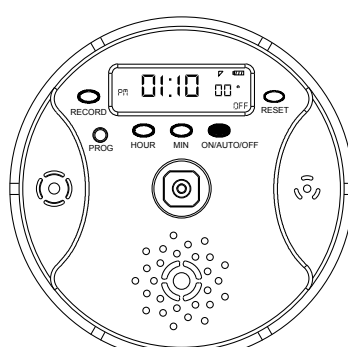


Fig-10

- In **OFF** mode the feeder does not work.

## 1.4 Setting the Program Mode

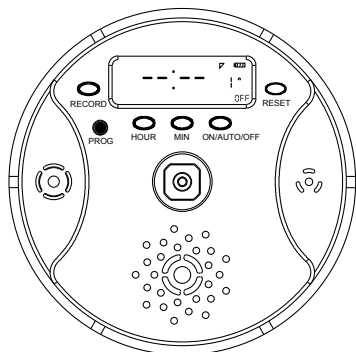


Fig-11

- Press the **PROGRAM** button to enter into program mode. The display will show 1 which means that we are setting the 1<sup>st</sup> schedule.

## 1.5 Timer Programming Examples :

- Let us set a schedule for 7.10 am.

- Press the **HOUR** button till the display shows **7 AM**.

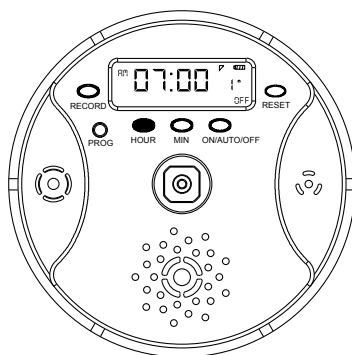


Fig-12

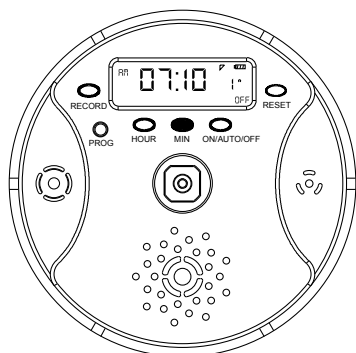


Fig-13

- Press the **MINUTE** button till the display shows 10.

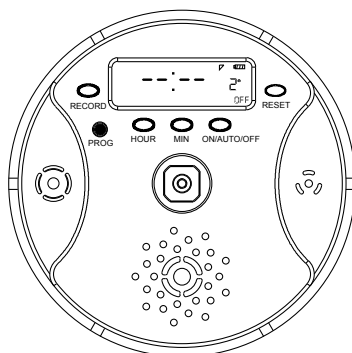


Fig-14

- Press the **PROGRAM** button again and the display will show 2 which means that we are setting the second feed time.

# PROGRAM TO FEED CHART

No. of Programs	No. of Feeds / Day							
	Day 1	Day 2	Day 3	Day 4	Day 5	Day 6	Day 7	Day 8
1	1	1	1	1	1	1	1	1
2	2	2	2	2				
3	3	3	2					
4	4	4						
5	5	3						
6	6	2						
7	7	1						
8	8	0						

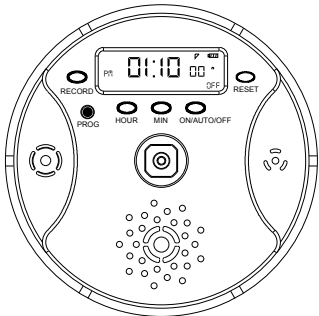


Fig-15

- Press the **PROGRAM** button again to exit from the program mode to **CLOCK** mode.

**NOTE :**

To exit out of program mode press **PROGRAM** button until you see the **CLOCK** mode Appear.

## 1.6 Recording Voice

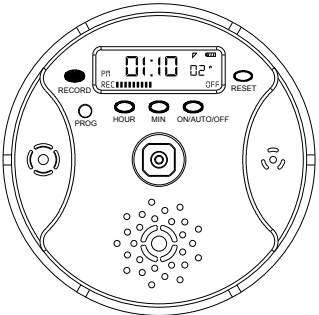


Fig-16

- Press the **RECORD** button to record your voice, a record time bar will appear on the display which indicates the memory level. You can record upto 7 seconds.

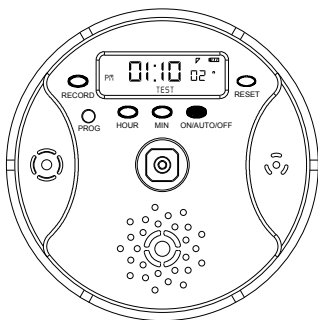


Fig-17

- Press the **ON/AUTO/OFF** button until the timer display shows **TEST**, to play back the recorded voice in the **TEST** mode. This is used to test the voice recording and demonstrates the function of the timer.

## 1.7 Setting Feeder in Auto Mode

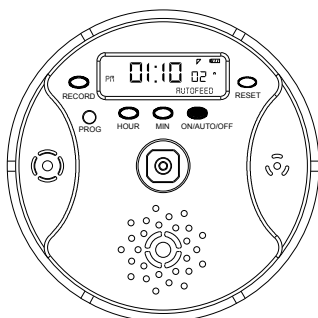


Fig-18

- Press the **ON/AUTO/OFF** button until the display shows **AUTO**, to set the feeder in **AUTO** mode.

**Now your 8 Day Autopetfeeder is ready to feed your Pet 8 Times a Day or as per the program/feed Chart.**

**Ergo Systems Inc.,**

**E-mail**  
support@ergosys.net

**Toll-Free Phone.US only**  
1-888-ERGOSYS  
(1-888-374-6797)

**Website**  
<http://www.autopetfeeder.com>

**International Phone**  
1-630-543-7686

**Ergosys.net**  
ergo systems inc.

**Warranty Registration**  
<http://www.autopetfeeder.com/warranty.asp>

**Fax** 1-866-899-5389